


# Steps for setting up 2 (or more) communicating Aquavar CPC drives:

1

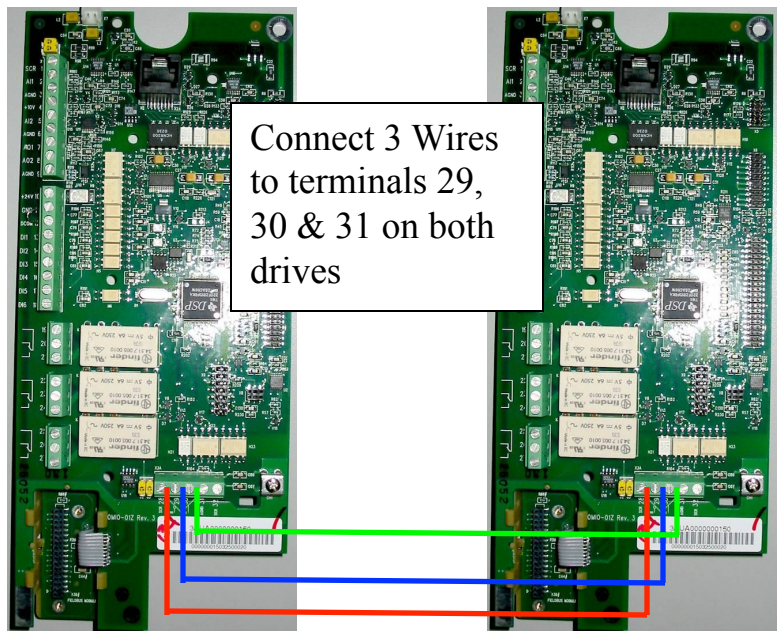

(Recommend 22AWG 3 or 4 wire shielded cable)

2

On the Keypad of the first drive Go To:

- Menu
- Parameters
- Group 11
- Parameter 1102
- (Application macro)
- Change to: Multicontrol



3

Repeat step 2 on the 2nd drive

4

- Now on the 2<sup>nd</sup> Drive, Exit out to Groups
- Go to Group 22
- Parameter 2207
- (Pump Address)
- Change value to 2



### Notes:

Repeat steps 3 and 4 for (up to 2) additional drives as needed

These simple instructions are in addition to the basic wiring and programming used for setting up individual drives.

*For expanded detail of Aquavar CPC setup and capabilities, refer to IM167, Aquavar CPC Instruction and Operation manual.*