




## PACO KP Cross Section

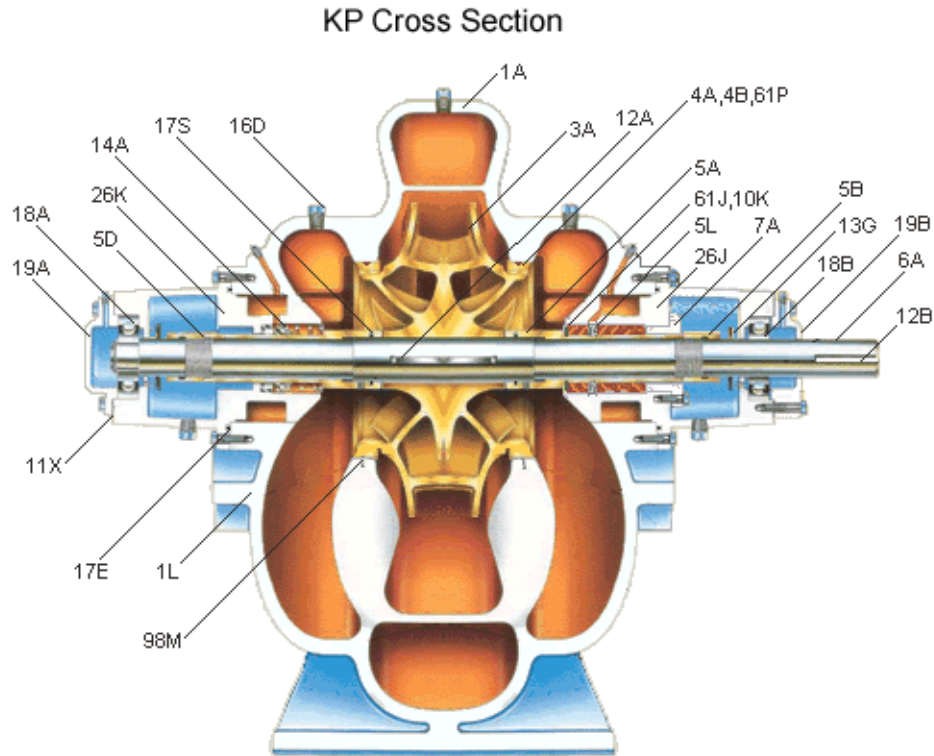

### PARTS LIST

1A - UPPER CASE	12B - KEY, COUPLING
1L - LOWER CASE	13A - PACKING RING
3A - IMPELLER	13G - SLINGER
4A - CASE WEAR RING	14A - SEAL SEAT
*4B - IMPELLER WEAR RING	16D - DRAIN PLUG
5A - SHAFT SLEEVE	17E - O-RING GASKET
5B - LOCKING SLEEVE, LH	17S - O-RING GASKET
5D - LOCKING SLEEVE, RH	18A - BEARING
5L - LANTERN RING	18B - BEARING
6A - SHAFT	19A - BEARING CAP
7A - PACKING GLAND	19B - BEARING CAP
10A - WASHER, IMPELLER	26J - BEARING HOUSING
10K - PACKING RETAINER	26K - BEARING HOUSING
11X - GASKET	61J - RETAINING RING
12A - KEY, IMPELLER	61P - RETAINING RING
	98M - ROLL PIN