OPERATOR'S MANUAL

PX03P-XXX-XXX-AXX

INCLUDING: OPERATION, INSTALLATION & MAINTENANCE

3/8" DIAPHRAGM PUMP

REVISED: 12-16-16 (REV: H)





READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EQUIPMENT.

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

SERVICE KITS

Refer to Model Description Chart to match the pump material options. **637428** for air section repair (see page 7). **637429-XX** for fluid section repair (see page 5).

PUMP DATA

Models..... See Model Description Chart for "-XXX" options.

Pump Type.. Air Operated Double Diaphragm. **Material**.... See Model Description Chart. Weight

PX03P-XDS-XXX-AXXX 4.16 lbs (1.89 kgs) PX03P-XES-XXX-AXXX 4.26 lbs (1.93 kgs) PX03P-XKS-XXX-AXXX 4.50 lbs (2.04 kgs) PX03P-XLS-XXX-AXXX..... 4.62 lbs (2.10 kgs) PX03P-XPS-XXX-AXXX 3.44 lbs (1.56 kgs) PX03P-XRS-XXX-AXXX 3.50 lbs (1.59 kgs) **Maximum Air Inlet Pressure** 100 psig (6.9 bar) **Maximum Material InletPressure** 10 psig (0.69 bar) **Maximum Outlet Pressure** 100 psig (6.9 bar) **Air Consumption @ 40 psig** 1 cfm /gallon (approx.) **Maximum FlowRate (flooded inlet)**

Duckbill...... 8.7 gpm (32.9 lpm)

Displacement / Cycle @ 100 psig

Ball check 0.022 gallons (0.083 lit.) Duckbill.............. 0.018 gallons (0.068 lit.)

Maximum Particle Size

Duckbill..... fibers

Maximum Temperature Limits (diaphragm / ball / seal material)

Acetal.....-10° to 180° F (-12° to 82° C) E.P.R / EPDM......-60° to 280° F (-51° to 138° C) Hytrel[®] -20° to 180° F (-29° to 82° C) Kynar P.V.D.F...... 10° to 200° F (-12° to 93° C) Neoprene 0° to 200° F (-18° to 93° C) Polypropylene...... 35° to 175° F (2° to 79° C) Santoprene[®] -40° to 225° F (-40° to 107° C) PTFE 40° to 225° F (4° to 107° C) Viton[®] -40° to 350° F (-40° to 177° C)

Groundable Models. . PX03P-XDS-XXX-AXXX


PX03P-XES-XXX-AXXX

Dimensional Data.... See page 9

Noise Level

@ 70 psig 60 cpm.... 72.7 dB(A)^①

① The pump sound pressure levels published here have been updated to an Equivalent Continuous Sound Level (LA $_{\rm eq}$) to meet the intent of ANSI S1.13-1971, CAGI-PNEUROP S5.1 using

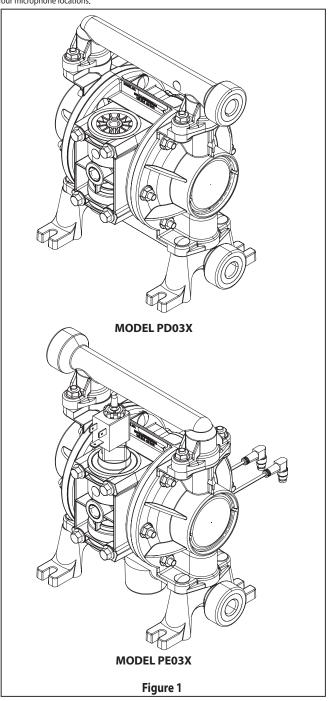





MODEL DESCRIPTION CHART

| Examp | le: PX03 P - X X S - X X X - A X | X |
|------------------|--|---|
| Model | Series Series | |
| PD03- | Standard Pump | |
| PE03- | Electronic Interface | |
| Cente | Body Material Control of the Control | |
| | lypropylene | |
| | onnection | |
| | 8 - 18 NPTF - 1 | |
| | 13/8 (3/8 - 19 BSP) | |
| Fluid (| aps & Manifold Material | |
| | oundable Acetal (single port) | |
| | oundable Acetal (multiple port) nar PVDF (single port) | |
| | nar PVDF (multiple port) | |
| P - Po | lypropylene (single port) | |
| R - Po | lypropylene (multiple port) | |
| Hardw | are Material | |
| | ainless Steel | |
| | laterial | |
| D - A | | |
| | nar PVDF lypropylene | 1 |
| | sinless Steel | |
| 0 - (D | uckbill) | |
| Ball N | aterial | |
| | ntoprene | |
| C - H | | |
| J- Ni K- Ef | trile (*) | |
| | con (*) | |
| | poprene (*) | |
| | ainless Steel | |
| T - P1 V - Vi | | |
| | ickbill models | |
| Diaph | ragm Material | |
| A - Sa | ntoprene | |
| C - H | | |
| V - Vi | FE / Santoprene | |
| Revisi | | |
| A- Re | vision | |
| Specia | Ity Code 1 (Blank if no Speciality Code) | |
| | olenoid 120 VAC,110 VAC AND 60 VDC | |
| | plenoid 12 VDC, 24 VAC and 22 VAC | |
| | elenoid 240 VAC, 220 VAC AND 120 VDC | |
| | plenoid 24 VDC, 48 VAC and 44 VAC | |
| | elenoid 12 VDC NEC / CEC | |
| | plenoid 24 VDC NEC / CEC | |
| | plenoid 12 VDC ATEX / IECEx | 1 |
| | olenoid 24 VDC ATEX / IECEX | |
| | olenoid 120 VAC NEC / CEC | |
| | plenoid 220VAC ATEX / IECEx | |
| | olenoid with no Coil orted Motor (No major valve) | |
| | andard Valve Block (No Solenoid) | |
| | rcle Sensing on Major Valve | |
| | lty Code 2 (Blank if no Speciality Code) | 1 |
| | | _ |
| | nd of Stroke feedback + Leak Detection | |
| | nd of Stroke feedback nd of Stroke ATEX / IECEx / NEC / CEC | |
| | nd of Stroke + Leak Detection ATEX / IECEx / NEC / CEC | |
| | eak Detection | |
| M- L | eak Detection ATEX / IECEx / NEC / CEC | |
| | nd of Stroke NEC | |
| | nd of Stroke NEC / Leak Detection NEC | |
| | o option I Testing | |
| | | |

NOTICE: All possible options are shown in the chart, however, certain combinations may not be recommended. Consult a representative or the factory if you have questions concerning availability.

Page 2 of 12 PX03P-XXX-XXXX-AXXXX (en)

OPERATING AND SAFETY PRECAUTIONS

READ, UNDERSTAND, AND FOLLOW THIS INFORMATION TO AVOID INJURY AND PROPERTY DAMAGE.





- Do not exceed the maximum inlet air pressure as stated on the pump model plate.
- Be sure material hoses and other components are able to withstand fluid pressures developed by this pump. Check all hoses for damage or wear. Be certain dispensing device is clean and in proper working condition.
- <u>★ WARNING</u> STATIC SPARK. Can cause explosion resulting in severe injury or death. Ground pump and pumping system.
- PX03P-XDS-XXX-AXXX and PX03P-XES-XXX-AXXX
 Groundable Acetal pumps: Use the pump ground lug
 provided. Connect to a 12 ga. (minimum) wire (kit is
 included) to a good earth ground source.
- Sparks can ignite flammable material and vapors.
- The pumping system and object being sprayed must be grounded when it is pumping, flushing, recirculating or spraying flammable materials such as paints, solvents, lacquers, etc. or used in a location where surrounding atmosphere is conducive to spontaneous combustion. Ground the dispensing valve or device, containers, hoses and any object to which material is being pumped.
- Secure pump, connections and all contact points to avoid vibration and generation of contact or static spark.
- Consult local building codes and electrical codes for specific grounding requirements.
- After grounding, periodically verify continuity of electrical path to ground. Test with an ohmmeter from each component (e.g., hoses, pump, clamps, container, spray gun, etc.) to ground to insure continuity. Ohmmeter should show 0.1 ohms or less.
- Submerse the outlet hose end, dispensing valve or device in the material being dispensed if possible. (Avoid free streaming of material being dispensed.)
- Use hoses incorporating a static wire.
- Use proper ventilation.
- Keep inflammables away from heat, open flames and sparks.
- Keep containers closed when not in use.
- ▲ WARNING Pump exhaust may contain contaminants.

 Can cause severe injury. Pipe exhaust away from work area and personnel.
- In the event of a diaphragm rupture, material can be forced out of the air exhaust muffler.
- Pipe the exhaust to a safe remote location when pumping hazardous or inflammable materials.
- Use a grounded 3/8" minimum i.d. hose between the pump and the muffler.
- <u>MARNING</u> HAZARDOUS PRESSURE. Can result in serious injury or property damage. Do not service or clean pump, hoses or dispensing valve while the system is pressurized.
- Disconnect air supply line and relieve pressure from the system by opening dispensing valve or device and / or carefully and slowly loosening and removing outlet hose or piping from pump.
- ★ WARNING HAZARDOUS MATERIALS. Can cause serious injury or property damage. Do not attempt to return a pump to the factory or service center that contains hazardous material. Safe handling practices must comply with local and national laws and safety code requirements.

- Obtain Material Safety Data Sheets on all materials from the supplier for proper handling instructions.
- ▲ WARNING EXPLOSION HAZARD. Models containing aluminum wetted parts cannot be used with 1,1,1-trichloroethane, methylene chloride or other halogenated hydrocarbon solvents which may react and explode.
- Check pump motor section, fluid caps, manifolds and all wetted parts to assure compatibility before using with solvents of this type.
- ▲ CAUTION Verify the chemical compatibility of the pump wetted parts and the substance being pumped, flushed or recirculated. Chemical compatibility may change with temperature and concentration of the chemical(s) within the substances being pumped, flushed or circulated. For specific fluid compatibility, consult the chemical manufacturer.
- ▲ CAUTION Be certain all operators of this equipment have been trained for safe working practices, understand it's limitations, and wear safety goggles / equipment when required.
- ▲ CAUTION Do not use the pump for the structural support of the piping system. Be certain the system components are properly supported to prevent stress on the pump parts.
- Suction and discharge connections should be flexible connections (such as hose), not rigid piped, and should be compatible with the substance being pumped.
- <u>A CAUTION</u> Prevent unnecessary damage to the pump. Do not allow pump to operate when out of material for long periods of time.
- Disconnect air line from pump when system sits idle for long periods of time.
- <u>^</u> CAUTION Use only genuine ARO replacement parts to assure compatible pressure rating and longest service life.
- NOTICE Install the pump in the vertical position.

 The pump may not prime properly if the balls do not check by gravity upon start-up.
- NOTICE RE-TORQUE ALL FASTENERS BEFORE OPERATION. Creep of housing and gasket materials may cause fasteners to loosen. Re-torque all fasteners to insure against fluid or air leakage.
- NOTICE Replacement warning labels are available upon request: Static Spark" pn \ 93616-1, Diaphragm Rupture" pn \ 93122.
- ▲ WARNING = Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.
- <u>↑ CAUTION</u> = Hazards or unsafe practices which could result in minor personal injury, product or property damage.
- NOTICE = Important installation, operation or maintenance information.

PX03P-XXX-XXXX (en) Page 3 of 12

GENERAL DESCRIPTION

The ARO diaphragm pump offers high volume delivery even at low air pressure and a broad range of material compatibility options available. Refer to the model and option chart. ARO pumps feature stall resistant design, modular air motor / fluid sections.

Air operated double diaphragm pumps utilize a pressure differential in the air chambers to alternately create suction and positive fluid pressure in the fluid chambers, ball checks insure a positive flow of fluid.

Pump cycling will begin as air pressure is applied and it will continue to pump and keep up with the demand. It will build and maintain line pressure and will stop cycling once maximum line pressure is reached (dispensing device closed) and will resume pumping as needed.

AIR AND LUBE REQUIREMENTS

WARNING EXCESSIVE AIR PRESSURE. Can cause pump damage, personal injury or property damage.

- A filter capable of filtering out particles larger than 50 microns should be used on the air supply. There is no lubrication required other than the "O" ring lubricant which is applied during assembly or repair.
- If lubricated air is present, make sure that it is compatible with the "O" rings and seals in the air motor section of the pump.

OPERATING INSTRUCTIONS

- Always flush the pump with a solvent compatible with the material being pumped if the material being pumped is subject to "setting up" when not in use for a period of time.
- Disconnect the air supply from the pump if it is to be inactive for a few hours.
- The outlet material volume is governed not only by the air supply but also by the material supply available at the inlet. The material supply tubing should not be too small or restrictive. Be sure not to use hose which might collapse.
- When the diaphragm pump is used in a forced-feed (flooded inlet) situation, it is recommended that a Check Valve" be installed at the air inlet.
- Secure the diaphragm pump legs to a suitable surface to insure against damage by vibration.

MAINTENANCE

- Certain ARO "Smart Parts" are indicated which should be available for fast repair and reduction of down time.
- Provide a clean work surface to protect sensitive internal moving parts from contamination from dirt and foreign matter during service disassembly and reassembly.
- Keep good records of service activity and include pump in preventive maintenance program.
- Service Kits are available to service two separate Diaphragm Pump functions: 1. AIR SECTION, 2. FLUID SEC-TION. The Fluid Section is divided further to match typical active MATERIAL OPTIONS.

• Viton® and Hytrel® are registered trademarks of the DuPont® Company Loctite® is a registered trademark of Henkel Loctite Corporation

Santoprene® is a registered trademark of Monsanto Company, licensed to Advanced Elastomer Systems, L.P. Lubriplate® is a registered trademark of Lubriplate Division (Fiske Brothers Refining Company) •

Page 4 of 12 PX03P-XXX-XXX-AXXX (en)

PARTS LIST / PX03P-XXX-XXX-AXXX FLUID SECTION

• 637429-XX Fluid Section service kits include: Balls (see BALL OPTION, refer to -XX in chart below), Diaphragms (See DIAPHRAGM OPTION, refer to -XX in chart below) and item 19 (listed below), plus items 144, 174 and 94276 Lubriplate® grease (page 7).

| | COMMON PARTS | | | | | | | | | | | |
|------------|---------------------------|-----|----------|-------|--|------|---------------------------|------|----------|-------|--|--|
| Item | Description (size) | Qty | Part No. | [Mtl] | | Item | Description (size) | Qty | Part No. | [Mtl] | | |
| 9 1 | Connecting Rod | (1) | 97122 | [SS] | | 27 | Bolt (1/4" - 20 x 1-1/8") | (12) | 96471 | [SS] | | |
| 5 | Diaphragm Washer | (2) | 96556 | [GFN] | | 29 | Nut (1/4" - 20) | (20) | 93828 | [SS] | | |
| 26 | Bolt (1/4" - 20 x 1-1/8") | (8) | 96471 | [SS] | | 77 | Logo Plate | (2) | 93264 | [A] | | |

| | MANIFOLD / FLUID CAP OPTIONS PX03P-XXS-XXX-AXXX | | | | | | | | | | | | | |
|---------------|---|-----|----------|---------------|----------|---------------------|----------|---------------------|----------|---------------------|----------|---------------------|----------|--------------|
| Polypropylene | | | | | Kyna | r PVDF | | Groundable Acetal | | | | | | |
| | | | PX03P- | X <u>P</u> S- | PX03P-X | PX03P-X <u>R</u> S- | | PX03P-X <u>K</u> S- | | PX03P-X <u>L</u> S- | | PX03P-X <u>D</u> S- | | X <u>E</u> S |
| Item | Description (size) | Qty | Part No. | [Mtl] | Part No. | [Mtl] | Part No. | [Mtl] | Part No. | [Mtl] | Part No. | [Mtl] | Part No. | [Mtl] |
| 6 | Diaphragm Nut (1/4" - 20) | (2) | 93810-7 | [P] | 93810-7 | [P] | 93810-3 | [K] | 93810-3 | [K] | 93810-2 | [D] | 93810-2 | [D] |
| 15 | Fluid Cap | (2) | 96460-1 | [P] | 96460-1 | [P] | 96460-3 | [K] | 96460-3 | [K] | 96460-2 | [GA] | 96460-2 | [GA] |
| 43 | Ground Strap | (1) | | | | | | | | | 92956-1 | [SS] | 92956-1 | [SS] |
| 57 | Ground Kit Assembly (not shown) | (1) | | | | | | | | | 66885-1 | | 66885-1 | |
| 60 | Inlet Manifold (NPTF) | (1) | 96468-1 | [P] | 96468-7 | [P] | 96468-3 | [K] | 96468-9 | [K] | 96468-2 | [GA] | 96468-8 | [GA] |
| 60 | (BSP) | (1) | 96468-4 | [P] | 96468-10 | [P] | 96468-6 | [K] | 96468-12 | [K] | 96468-5 | [GA] | 96468-11 | [GA] |
| 61 | Outlet Manifold (NPTF) | (1) | 96469-1 | [P] | 96469-1 | [P] | 96469-3 | [K] | 96469-3 | [K] | 96469-2 | [GA] | 96469-2 | [GA] |
| 01 | (BSP) | (1) | 96469-4 | [P] | 96469-4 | [P] | 96469-6 | [K] | 96469-6 | [K] | 96469-5 | [GA] | 96469-5 | [GA] |
| 63 | Pipe Plug (NPTF) | (1) | | | 94478-1 | [PPG] | | | 94478-3 | [K] | | | 94478-2 | [D] |
| 03 | (BSP) | (1) | | | 96559-1 | [PPG] | | | 96559-3 | [K] | | | 96559-2 | [D] |

| | SEAT OPT BP-XXS- <u>X</u> | | | | | | | | | BALL / DUCKBILL OPTIONS PX03P-XXS-X <u>X</u> X-AXXX | | | | | | | |
|---------------|------------------------------|-----|-------|--|---------------|-------------------|-----|-------|--|--|----------|-----|-------|--|--|--|--|
| | "21" | , | | | | ●"22" (5/8" dia.) | | | | | " | | | | | | |
| - <u>X</u> XX | Seat | Qty | [Mtl] | | -X <u>X</u> X | Ball | Qty | [Mtl] | | -X <u>X</u> X | Duckbill | Qty | [Mtl] | | | | |
| - <u>D</u> XX | 96580-2 | (4) | [D] | | -X <u>A</u> X | 96481-A | (4) | [Sp] | | -XĪX | 96744-2 | (4) | [B] | | | | |
| - <u>K</u> XX | 96580-3 | (4) | [K] | | -X <u>C</u> X | 96481-C | (4) | [H] | | -X <u>N</u> X | 96744-3 | (4) | [N] | | | | |
| - <u>P</u> XX | 96580-1 | (4) | [P] | | -X <u>S</u> X | 96513 | (4) | [SS] | | -X <u>L</u> X | 96744-4 | (4) | [V] | | | | |
| - <u>S</u> XX | 96537 | (4) | [SS] | | -X <u>T</u> X | 96481-4 | (4) | [T] | | -X <u>K</u> X | 96744-1 | (4) | [E] | | | | |
| - <u>0</u> XX | 96745 | (4) | [P] | | -X <u>V</u> X | 96481-3 | (4) | [V] | | | | | | | | | |

NOTE: Item 19 "O" ring is not used with PD03P-XXX-0XX-AXXX seat option.

| | DIAPHRAGM OPTIONS PX03P-XXS-XX <u>X</u> -AXXX | | | | | | | | | |
|--------------|---|-----------|-----|-------|-----------|-----|-------|-----------------------|-----|-------|
| | SERVICE KIT | 0 | "7" | | 0 ' | '8" | | 0 "19" | | |
| | - <u>X</u> X = (Ball) | | | | | | | "O" Ring | | |
| -XX <u>X</u> | -X <u>X</u> = (Diaphragm) | Diaphragm | Qty | [Mtl] | Diaphragm | Qty | [Mtl] | (3/32" x 1-1/8" o.d.) | Qty | [Mtl] |
| -XX <u>A</u> | 637429-XA | 96533-A | (2) | [Sp] | | | | 93761 | (4) | [E] |
| -XX <u>C</u> | 637429-XC | 96533-C | (2) | [H] | | | | Y325-119 | (4) | [B] |
| -XX <u>T</u> | 637429-XT | 96538 | (2) | [T] | 96533-A | (2) | [Sp] | 96514 | (4) | [T] |
| -XX <u>V</u> | 637429-XV | 96558 | (2) | [V] | | | | Y327-119 | (4) | [V] |

| | DUAL INLET / DUAL OUTLET KITS 637442-X | | | | | | | | | | | | | |
|------|--|--------------------------|----------|----------------------|----------|--------------------|----------|--------------------|----------|----------------|----------|----------------|----------|----------------|
| | | Polypropylene Kynar PVDF | | | | | | Groundable Acetal | | | | | | |
| | | | 637442 | 637442-1 (NPT) 63744 | | PT) 637442-4 (BSP) | | 637442-3 (NPT) 637 | | 637442-6 (BSP) | | 637442-2 (NPT) | | 5 (BSP) |
| Item | Description (size) | Qty | Part No. | [Mtl] | Part No. | [Mtl] | Part No. | [Mtl] | Part No. | [Mtl] | Part No. | [Mtl] | Part No. | [Mtl] |
| 17 | Dual Outlet Manifold | (2) | 96520-1 | [P] | 96520-4 | [P] | 96520-3 | [K] | 96520-6 | [K] | 96520-2 | [GA] | 96520-5 | [GA] |
| 18 | Dual Inlet Manifold | (2) | 96519-1 | [P] | 96519-4 | [P] | 96519-3 | [K] | 96519-6 | [K] | 96519-2 | [GA] | 96519-5 | [GA] |
| 19 | O" Ring (3/32" x 1-1/8" o.d.) | (4) | 96514 | [T] | 96514 | [T] | 96514 | [T] | 96514 | [T] | 96514 | [T] | 96514 | [T] |

⁹ Smart Parts" keep these items on hand in addition to the service kits for fast repair and reduction of down time.

MATERIAL CODE

[A] = Aluminum

[B] = Nitrile [D] = Acetal [E] = E.P.R.

[GA] = Groundable Acetal [GFN] = Glass Filled Nylon

[H] = Hytrel

[K] = Kynar PVDF

[N] = Neoprene [P] = Polypropylene [PPG] = Glass Filled


Polypropylene

[Sp] = Santoprene [SS] = Stainless Steel

[T] = PTFE [V] = Viton

PX03P-XXX-XXX-AXXX (en) Page 5 of 12

PARTS LIST / PX03P-XXX-XXX-AXXX FLUID SECTION

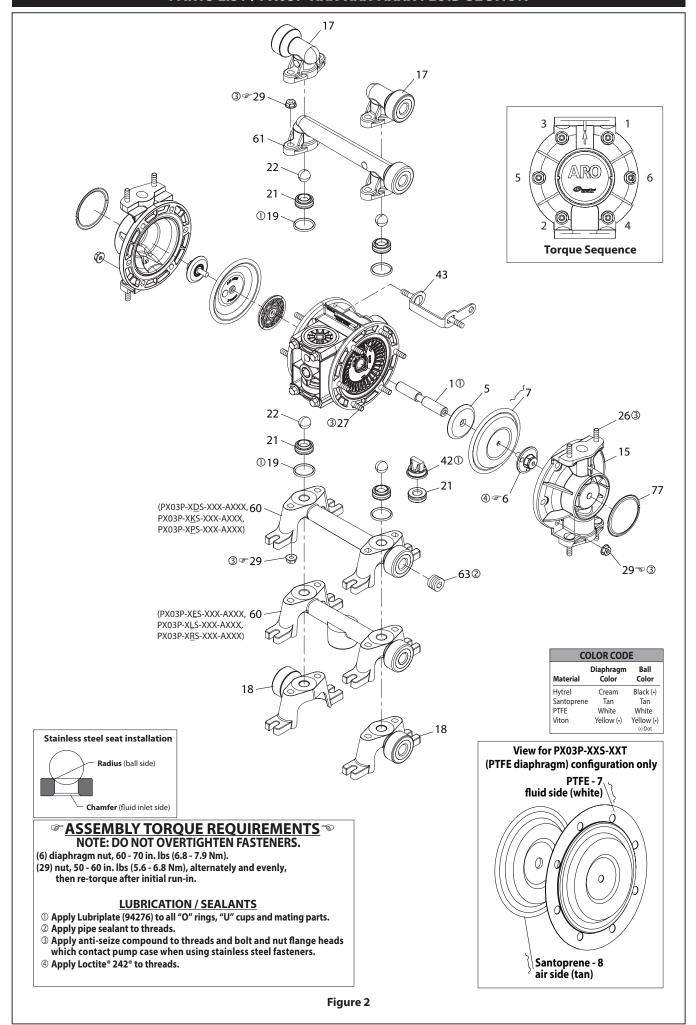

Page 6 of 12 PX03P-XXX-XXXX-AXXX (en)

PARTS LIST / PX03P-XXX-XXX-AXXX AIR MOTOR SECTION

Indicates parts included in 637428 Air Section Repair Kit.

| Item | Description (size) | Qty | Part No. | [Mtl] |
|--------------|---|------|----------|-------|
| 101 | Center Body | (1) | 97008 | [PPG] |
| 103R | Cover (right side) | (1) | 96488 | [D] |
| 103L | Cover (left side) | (1) | 96489 | [D] |
| 107 | Plug, Small | (1) | 96353 | [D] |
| 111 | Major Valve Spool (PD03P) | (1) | 95919 | [D] |
| 118 | Actuator Pin | (2) | 94874-1 | [SS] |
| © 121 | Washer | (2) | 96092 | [D] |
| 123 | Screw (#4 - 20 x 1/2") | (12) | 96093 | [SS] |
| 129 | Muffler Baffle (PXO3P-XXX-XXX-AX <u>Q</u> X, PXO3P-XXX-XXX-AX <u>L</u> X, PXO3P-XXX-XXX-AX <u>M</u> X) | (1) | 96542 | [P] |
| 130 | Gasket | (1) | 95931 | [SY] |
| © 132 | Air Manifold Gasket | (1) | 96214-1 | [B] |
| 134 | Flange Bolt (1/4" - 20 x 3") | (4) | 96487 | [SS] |
| 135 | Valve Block | (1) | 96204 | [PPG] |
| 136 | Plug, Large | (1) | 96352 | [D] |
| © 137 | "O" Ring (1/16" x 1-5/8" o.d.) | (3) | Y325-29 | [B] |
| © 138 | "U" Cup Packing (1/8" x 1" o.d.) | (1) | 94395 | [U] |

MATERIAL CODE

[B] = Nitrile [PPG] = Glass Filled Polypropylene [CK] = Ceramic [SS] = Stainless Steel

 [CK] = Ceramic
 [SS] = Stainless Ste

 [D] = Acetal
 [SY] = Syn-Seal

 [P] = Polypropylene
 [U] = Polyurethane

DIAPHRAGM PUMP SERVICE

GENERAL SERVICE NOTES:

- Inspect and replace old parts with new parts as necessary.
 Look for deep scratches on metallic surfaces, and nicks or cuts in "O" rings.
- Tools needed to complete disassembly and repair:
- 5/8" socket or wrench, 7/16" socket or wrench, 3/8" socket or wrench, 5/16" Allen wrench, T-10 Torx screwdriver, torque wrench (measuring inch pounds), "O" ring pick.

FLUID SECTION DISASSEMBLY

- 1. Remove (61) top manifold.
- 2. Remove (19) "O" rings, (21) seats and (22) balls.
- 3. Remove (60) bottom manifold.
- 4. Remove (19) "O" rings, (21) seats and (22) balls.
- 5. Remove (15) fluid caps.
- 6. Remove (6) diaphragm nut, (7) or (7 / 8) diaphragms and (5) washer.
- 7. Remove (1) connecting rod from air motor.
- 8. Carefully remove remaining (6) diaphragm nut, (7) or (7 / 8) diaphragms and (5) washer from (1) connecting rod. Do not mar surface of connecting rod.

FLUID SECTION REASSEMBLY

- Reassemble in reverse order.
- Lubricate (1) connecting rod with Lubriplate or equivalent "O" ring lubricant.
- Install (5) washers with i.d. chamfer toward diaphragm.
- When replacing PTFE diaphragms, install the 96533-A Santoprene diaphragm behind the PTFE diaphragm.

| Item | Description (size) | Qty | Part No. | [Mtl] |
|--------------|---------------------------------------|-----|----------|-------|
| ⑤ 139 | "U" Cup Packing (1/8" x 1-7/16" o.d.) | (1) | 96383 | [U] |
| 140 | Valve Insert | (1) | 93276 | [CK] |
| 141 | Valve Plate | (1) | 96173 | [CK] |
| © 144 | "U" Cup Packing (1/8" x 3/4" o.d.) | (2) | Y187-47 | [B] |
| © 166 | "O" Ring (1/16" x 1-1/4" o.d.) | (1) | Y325-24 | [B] |
| 167 | Pilot Piston (includes 168 and 169) | (1) | 67382 | [D] |
| 168 | "O" Ring (1/16" x 7/16" o.d.) | (2) | 96459 | [U] |
| 169 | "U" Cup Packing (1/8" x 5/8" o.d.) | (1) | 96384 | [U] |
| 170 | Spool Bushing | (1) | 96090 | [D] |
| © 171 | "O" Ring (1/16" x 13/16" o.d.) | (2) | Y325-17 | [B] |
| © 173 | "O" Ring (3/32" x 7/8" o.d.) | (2) | Y325-115 | [B] |
| © 174 | "O" Ring (3/32" x 11/32" o.d.) | (2) | Y325-105 | [B] |
| © 200 | Porting Gasket | (1) | 96364 | [B] |
| ② 232 | "O" Ring (1/16" x 3/8" o.d.) | (4) | Y325-10 | [P] |
| 236 | Nut (1/4" - 20) | (4) | Y12-4-S | [SS] |
| | | | | |
| 0 0 | Lubriplate FML-2 Grease | (1) | 94276 | |
| | Lubriplate Grease, 10 Pack | | 637308 | |

AIR MOTOR SECTION SERVICE

Service is divided into two parts - 1. Pilot Valve, 2. Major Valve.

 Air Motor Section Service is continued from Fluid Section repair.

PILOT VALVE DISASSEMBLY

- 1. Remove (123) screws, releasing (103) covers, (121) washers, (118) actuator pins and (167) pilot piston.
- 2. Remove (170) spool bushing and inspect inner bore of bushing for damage.

PILOT VALVE REASSEMBLY

- Clean and lubricate parts not being replaced from service kit.
- 2. Assemble (171) "O" rings to (170) bushing and assemble bushing into (101) center body.
- 3. Lubricate and assemble (167) pilot piston assembly into (170) bushing.
- 4. Assemble (173 and 174) "O" rings and (121) washers to (103) covers, then insert (118) actuator pins through assembly.
- 5. Assemble (144) "U" cups (note the lip direction) and (103) covers to (101) center body, securing with (123) screws.


 NOTE: Tighten (123) screws to 4 6 in. lbs (0.45 0.68 Nm).

MAJOR VALVE DISASSEMBLY

- 1. Unthread (123) screws, releasing (129) muffler baffle.
- 2. Unthread (134) bolts and pull (135) valve block and components from (101) center body.
- 3. Remove (132) gasket, (141) valve plate and (140) valve insert from (135) valve block.
- 4. Remove (134) bolts, releasing (107 and 136) plugs and (111) spool.

PX03P-XXX-XXXX (en) Page 7 of 12

PARTS LIST / PX03P-XXX-XXX-AXXX AIR MOTOR SECTION

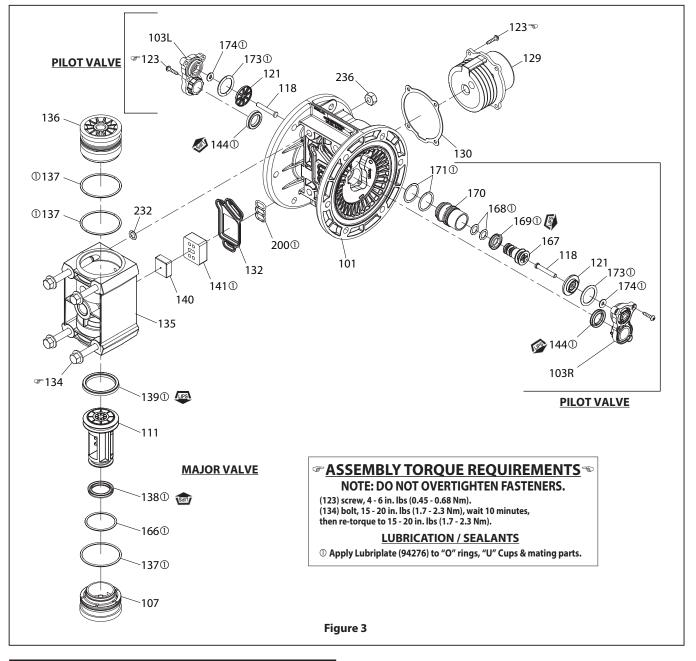

MAJOR VALVE REASSEMBLY

- 1. Assemble new (139 and 138) U" cups on (111) spool LIPS MUST FACE EACH OTHER.
- 2. Assemble (137) O" rings to (136) large plug.
- 3. Assemble (137 and 166) O" rings to (107) small plug.
- 4. Insert (111) spool into (136) large plug, then insert (136) large plug into (135) valve block, being sure the (111) spool is rotated to accept (140) valve insert.
- 5. Assemble (107) small plug into (135) valve block.
- 6. Assemble (140) valve insert and (141) valve plate to (135) valve block. Note: Assemble (140) valve insert with dished" side toward (141) valve plate. Assemble (141) valve plate with identification dot toward (132) gasket.
- 7. Assemble (132 and 200) gaskets and (135) valve block to (101) center body, securing with (134) bolts. NOTE: Tighten (134) bolts to 15 20 in. lbs (1.7 2.3 Nm).
- 8. Assemble (130) gasket and (129) muffler baffle to (101) center body, securing with (123) screws. **NOTE:** Tighten (123) screws to 4 6 in. lbs (0.45 0.68 Nm).

Page 8 of 12 PX03P-XXX-XXXX-AXXX (en)

TROUBLE SHOOTING

Product discharged from air exhaust.

- Check for diaphragm rupture.
- Check tightness of (6) diaphragm nut.

Air Bubbles in product discharge.

- Check connections of suction plumbing.
- Check "O" rings between intake manifold and fluid caps.
- Check tightness of (6) diaphragm nut.


Pump blows air out main exhaust when stalled on either stroke.

- Check "U" cups on (111) spool in major valve.
- Check (141) valve plate and (140) insert for wear.
- Check (169) U" cup on (167) pilot piston.

Pump blows air out main exhaust when stalled on either stroke.

- Check air supply.
- Check for plugged outlet hose.
- For the pump to prime itself, it must be mounted in the vertical position so that the balls will check by gravity.
- Check for pump cavitation suction pipe should be sized at least as large as the inlet thread diameter of the pump for proper flow if high viscosity fluids are being pumped. Suction hose must be non-collapsible type, capable of pulling a high vacuum.
- Check all joints on intake manifolds and suction connections. These must be airtight.
- Inspect the pump for solid objects lodged in the diaphragm chamber or the seat area.

DIMENSIONAL DATA

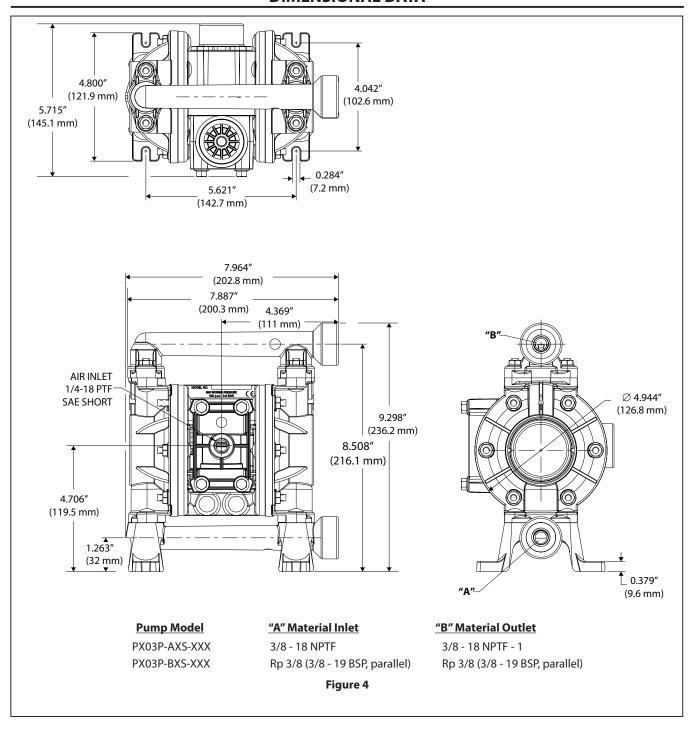

PX03P-XXX-XXXX (en) Page 9 of 12

PX03P-XXX-XXX (en) Page 11 of 12

